







PRE-FABRICATED

BATHROOM WALL RECESS



Waterproof









for drainage

Easy Installation

READY FOR TILING OR RENDERING

PLASTIC CONSTRUCTION

AVAILABLE IN 4 SIZES

SIZE	CODE	INSIDE SIZE	OUTSIDE SIZE
SMALL	CFPN300	305 X 305 X 85MM	406 X 406 X 91.5MM
LARGE	CFPN560	560 X 355 X 85MM	641 X 438 X 91.5MM
X-LARGE	CFPN600	610 X 305 X 85MM	710 X 406 X 91.5MM
DUAL	CFPN610D	305 X 305 X 92MM X 2	406 X 813 X 95MM

Product Range









CFPN300



CFPN600

CFPN610D

Instructions

- 1. Trace around the back of the insert, not including the mounting flange
- 2. Ensure there are at least 2 edges running along noggins
- 3. Cut out substrate as marked
- 4. Place niche in to the hole and ensure it is level
- 5. Apply silicone in a continuous line around the mounting flange
- 6. Secure the niche in the wall with fasteners (not supplied) Recommended screws: Size 8 - 10 x 30mm
- 7. Apply waterproof membrane
- 8. Feather out the flange to the substrate using a polymer modified adhesive
- 9. Tile to finish









BATHROOM WALL RECESS



100% Waterproof



Heat Resistant



Insulation Properties



Easy Installation

READY FOR TILING OR RENDERING

FIXING SCREWS + WASHERS INCLUDED

CFlex Material consists of a core of extruded polystyrene with a thin fibreglass reinforcement-mortar on both sides

AVAILABLE IN 4 SIZES

SIZE	CODE	INSIDE SIZE	OUTSIDE SIZE
SMALL	CFI300	300 X 340 X 90MM	320 X 360 X 100MM
MEDIUM	CFI400	400 X 340 X 90MM	420 X 360 X 100MM
LARGE	CFI600	604 X 304 X 90MM	624 X 324 X 100MM
X-LARGE	CFI800	804 X 304 X 90MM	824 X 324 X 100MM

Product Range





CFI300

CFI400



CFLSTTM BY DTA

CFI600


CFI800

Instructions

Wall Inserts

- 1.Place cavity insert on noggin in desired location
- 2.Secure with washer and screw included
- 3.Bring cement sheet up flush with edge of insert and secure sheet
- 4. Seal around edges and apply waterproofing membrane
- 5.Tile / Render to finish



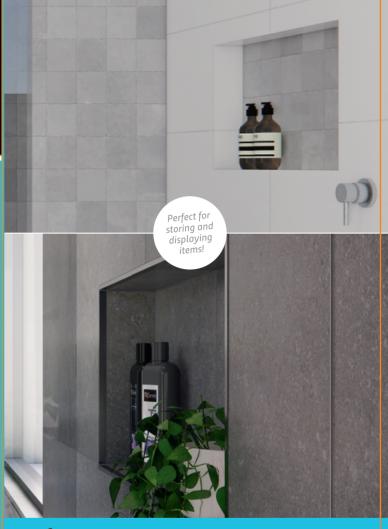

- ✓ Insulation properties
- Internal or external use
- ✓ Waterproof and heat resistant
- ✓ Can be tiled or rendered
- ✓ Perfect for inside showers and bathrooms
- Shower Inserts include fixing screws
- Depth of insert can be adjusted by trimming

* Waterproofing membrane should be applied.